


ZONE CONTROL PANEL

The ZP6 is a 6 zone, two-position forced air zone control panel that can be expanded to 12 zones. The panel can be used with single-stage, multi-stage, heat pump and dual fuel equipment with up to 3 stages of heating and 2 stages of cooling. Slide switch configuration makes setup quick and easy. A wide range of control options provide ultimate application flexibility including adjustable high/low limits, adjustable high/low balance point, stage timing, capacity control and priority cooling control.

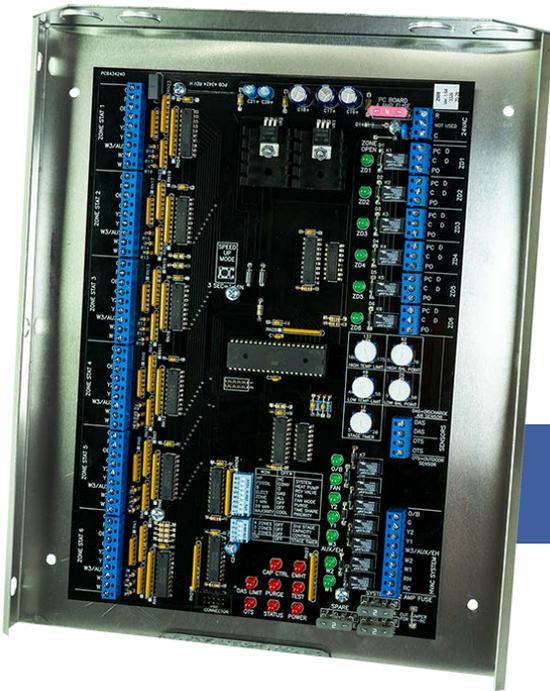

3-Zone Expansion Panel

ZP6-EP

This 3-zone expansion panel is used with the ZP6 zoning panel to increase the number of zones to 9 or 12.

Features and Benefits:

- 6 zones expandable up to 12
- Auto changeover
- Cooling priority or majority wins
- Twenty minute time share option
- LED status indication
- On-board adjustable high and low limits and balance points
- Staging by zone thermostat or built-in adjustable upstage timer
- 2nd stage capacity control option
- Purge cycle option
- Works with 2 or 3 wire zone dampers

Warranty:

- 10 Years

Specifications:


Construction	Aluminum enclosure with snap-on panel cover
Mounting	Snap track with 2 back plate screws
Dimensions	13.50" Height x 11.00" Width x 2.00" Depth
Operating Temperature	-40° F to 150° F
Adjustable Discharge Air Limits	Low Limit (40° F to 58° F) High Limit (100° F to 175° F)
Outdoor Balance Points	Low Balance Point (0° F to 50° F) High Balance Point (55° F to 70° F)
Purge Cycle	Off or 1 minute
Fan Mode	All zones or by zone thermostat



5351 East Thompson Road Suite 142
Indianapolis, IN 46237
P: 888.359.0362
F: 317.489.5204

info@iOhvaccontrols.com
www.iOhvaccontrols.com

BOARD DIAGRAM

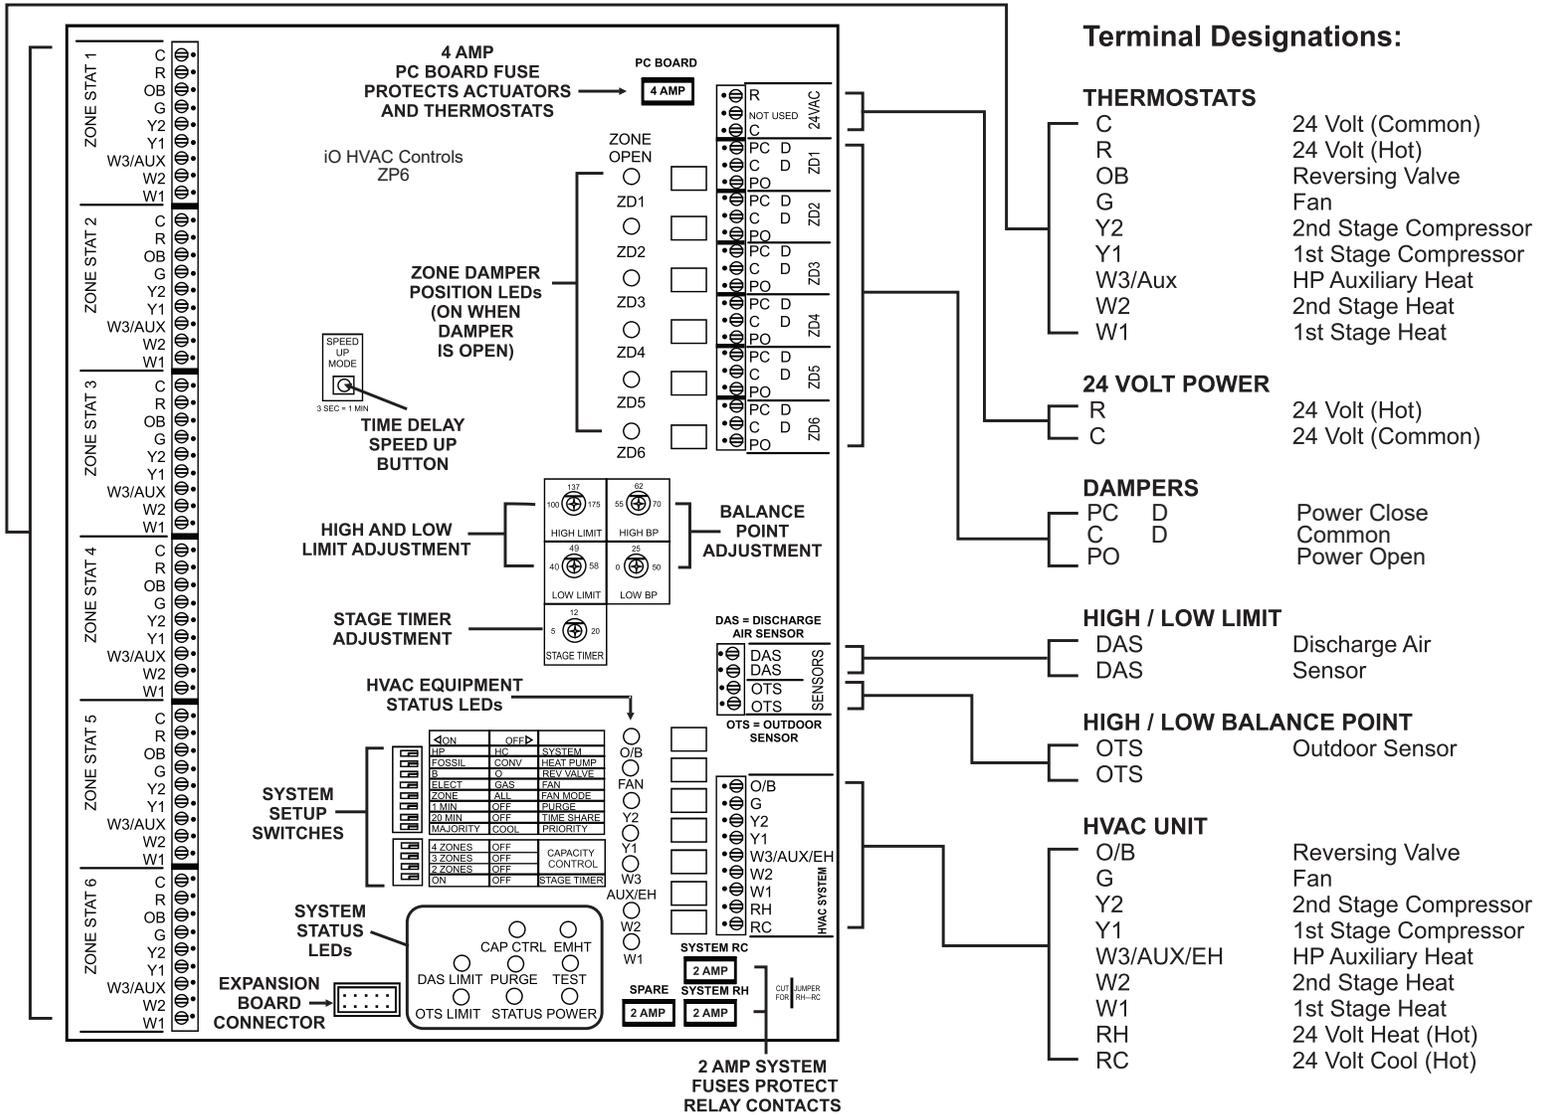

5351 East Thompson Road Suite 142
Indianapolis, IN 46237
P: 888.359.0362
F: 317.489.5204

info@iOhvaccontrols.com
www.iOhvaccontrols.com