


iO-WW HARDWIRED WARNING WATCHDOG™ WIRING DIAGRAM USING iO-WWR240 VOLTAGE MONITORING RELAY AND iO-WWPC PRESSURE CONTROL

CAUTION!
DISCONNECT POWER
TO CONDENSING UNIT
BEFORE BEGINNING
INSTALLATION

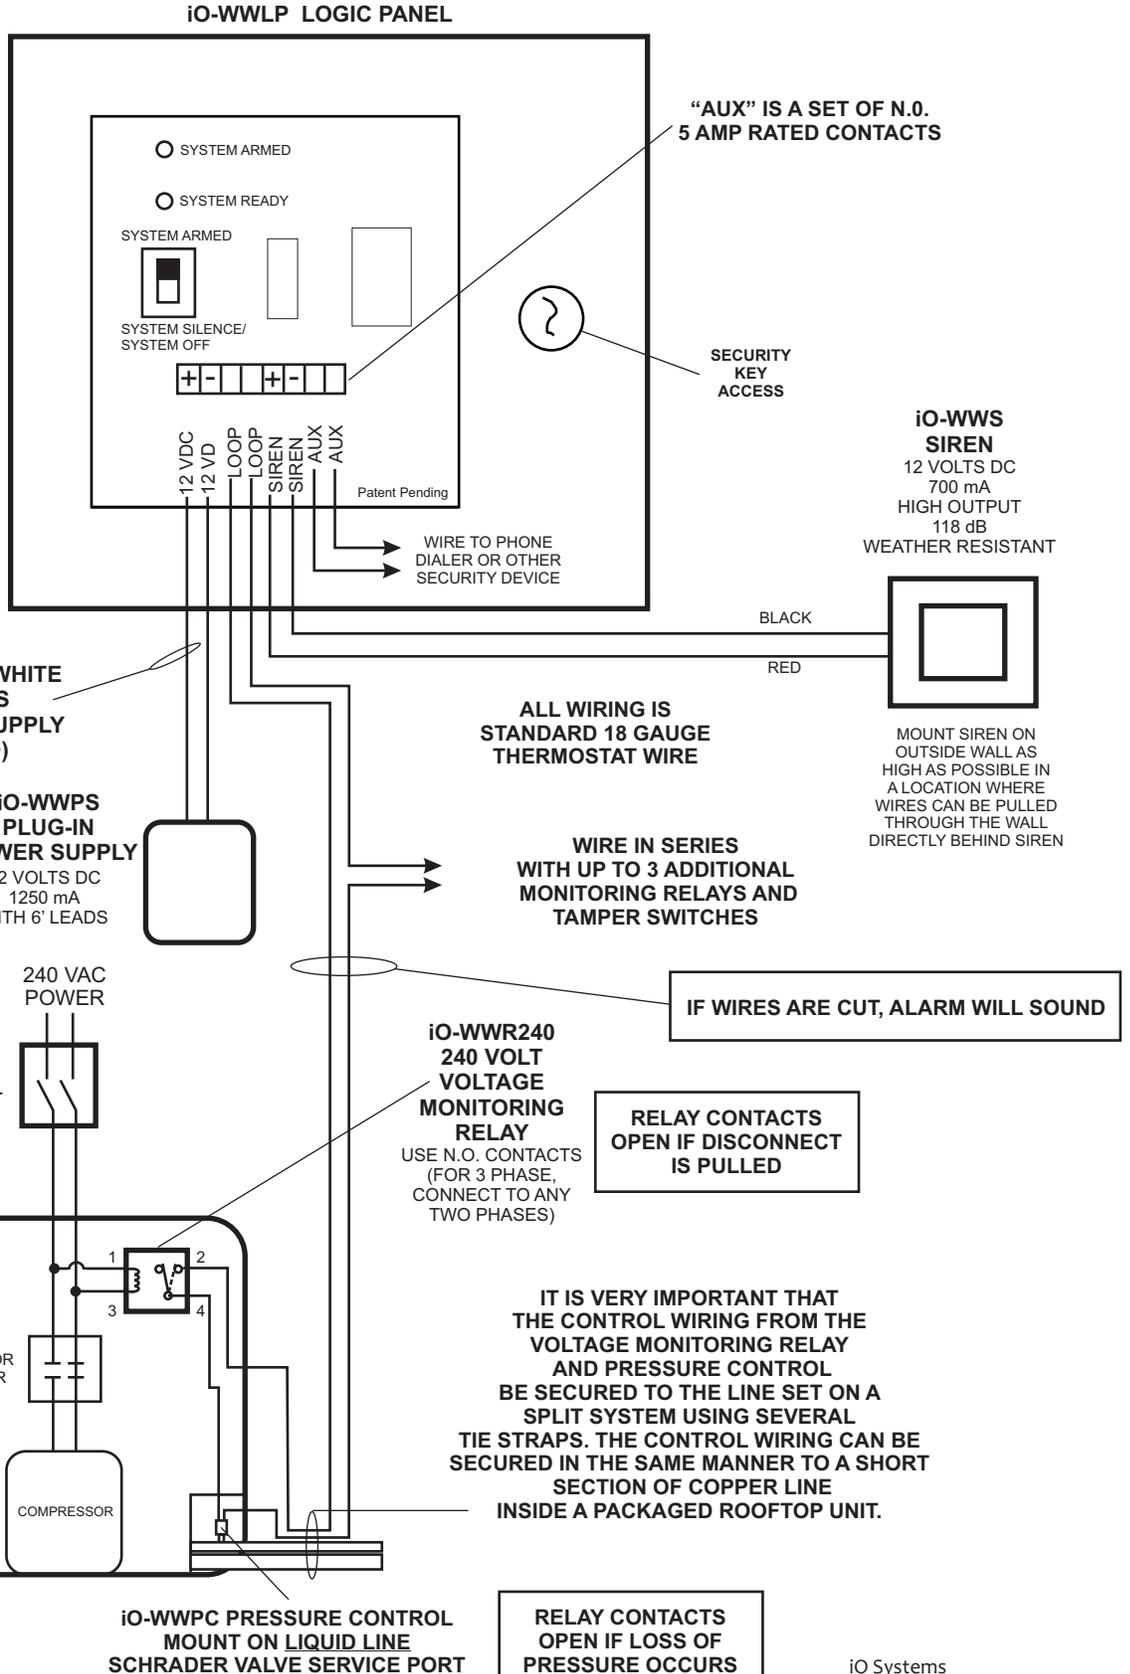

iO Systems
5351 E. Thompson Rd.
Suite 142
Indianapolis, IN 46237
Phone: 888-359-0362
Web: www.iohvacsystems.com

iO-WW HARDWIRED WARNING WATCHDOG™ INSTALLATION INSTRUCTIONS

CAUTION:

DISCONNECT POWER TO CONDENSING UNIT BEFORE BEGINNING INSTALLATION!

OVERVIEW:

The iO-WW hardwired Warning Watchdog™ is an alarm system designed to provide enhanced security against outdoor condensing unit theft and vandalism. The hardwired system consists of an indoor logic panel with 12 volt DC power supply, outdoor siren, condensing unit power monitoring relay and a pressure control switch. Wiring of all components is done with standard 18-2 gauge thermostat wire.

iO-WWLP LOGIC PANEL:

Mount the iO-WWLP Logic Panel in a secure but accessible indoor area within 4' of a 120 volt outlet. The iO-WWLP comes with an iO-WWPS 12 volt DC power supply with 6' leads. Connect the power supply to the logic panel making sure positive (+) and negative (-) are wired to the proper 12 VDC+ and 12VDC- terminals. **Do not apply power to logic panel until all wiring is completed.**

iO-WWS SIREN:

Mount the iO-WWS siren on an outside wall as high as possible in a location where wires can be pulled through the wall directly behind the siren and to the logic module. Use 18-2 thermostat wire to connect the siren to the logic panel making sure that the siren positive RED (+) and negative BLACK (-) are wired to the Siren + and Siren - terminals. Do not exceed 300 feet in wire length.

iO-WWR240 VOLTAGE MONITORING RELAY AND iO-WWPC PRESSURE CONTROL:

Make sure that the disconnect is pulled and that no voltage is present at the condensing unit.

Pull 18-2 thermostat wire from the logic panel to the outside of the building in a manner that minimizes the amount of exposed wire run to the condensing unit.

Mount the iO-WWR240 monitoring relay in the service compartment of the condensing unit. Connect the relay coil terminals (1) and (3) to the line side of the compressor contactor.

Mount the iO-WWPC pressure control on the liquid Schrader valve service port and wire in series with the voltage monitoring relay. Connect the other lead to LOOP terminals at the logic panel. Use several tie straps to secure the wire to the a section of copper line. (See wiring diagram on other side)

TEST, CHECK AND ARMING THE SYSTEM

After all wiring is completed, apply voltage to the condensing unit and 12 volt power to the logic panel. The system switch located on the logic panel control board is factory set to ALARM SILENCE / SYSTEM OFF. Check to see that the green SYSTEM READY LED is ON. This confirms that all monitoring controls in the LOOP circuit are closed. If the green LED remains OFF, check to see that all monitoring controls in the LOOP circuit are closed and that the power supply polarity is correct. Place the system switch in the SYSTEM ARMED position. The red SYSTEM ARMED LED will come ON. To test the alarm, wait 10 seconds after arming the system and remove one of the wires from the LOOP terminal at the logic panel. The alarm siren should sound in 2 seconds and will sound for a duration of 5 minutes. If the alarm siren does not sound, check the siren wire polarity. Place the system switch in the ALARM SILENCE / SYSTEM OFF position and reattach the LOOP wire confirming that the green SYSTEM READY LED is ON. Rearm the system by placing the system switch in the SYSTEM ARMED position and confirm that the red SYSTEM ARMED LED is ON. Close and lock the logic panel. In the event of a power failure, the system will automatically rearm when power is restored.

AUXILIARY ALARM CONTACTS

The auxiliary alarm contacts are rated at 5 Amps and are Normally Open. The contacts close when the LOOP circuit opens (Alarm Condition) and remain closed for a duration of 5 minutes and then open again.

In the unlikely event of condensing unit theft, iO Systems shall not be held liable.



iO Systems
5351 E. Thompson Rd.
Suite 142
Indianapolis, IN 46237
Phone: 888-359-0362
Web: www.iohvacsystems.com

iO-06-1104-032113